


R557RY042- Components and regulation

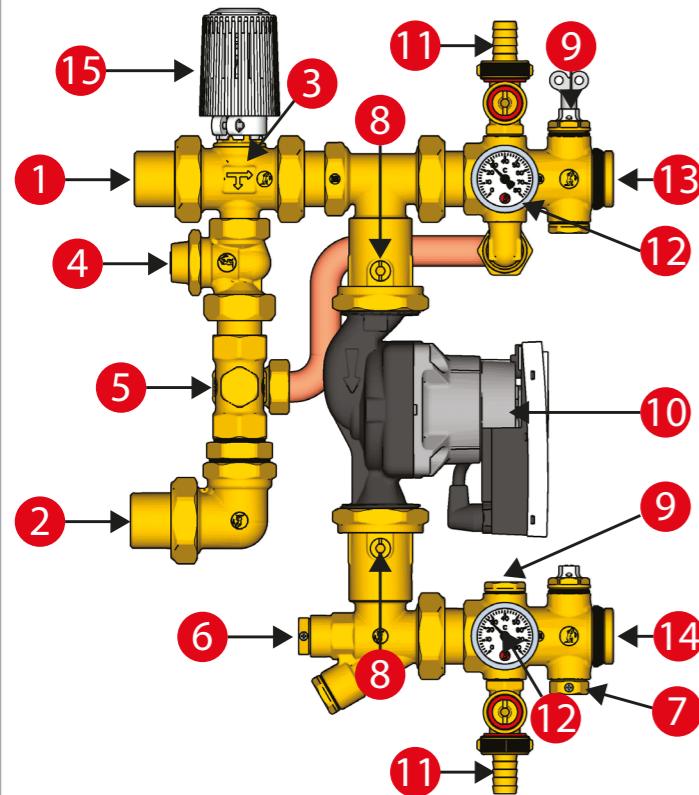

Regulation

Thermostatic 3 way valve 3

Head position	fully closed	1	2	3	4	5	fully open
T [°C]	20	25	34	45	56	67	70


Primary lockshield valve 4
HALF TURN OPENING
(recommended calibration)

Secondary lockshield valve 5
FULLY OPEN
(recommended calibration)

LEGEND


1	Inlet from boiler	9	Manual air vents
2	Return to boiler	10	Circulator
3	3-way thermostatic valve	11	Charge and discharge cocks
4	Primary lockshield valve	12	Housing of the immersion thermometers
5	Secondary lockshield valve	13	System return
6	Thermostatic sensor housing	14	System delivery
7	Safety thermostat housing	15	R462L thermostatic head
8	Circulator shut-off valve		

R557RY042- flow scheme

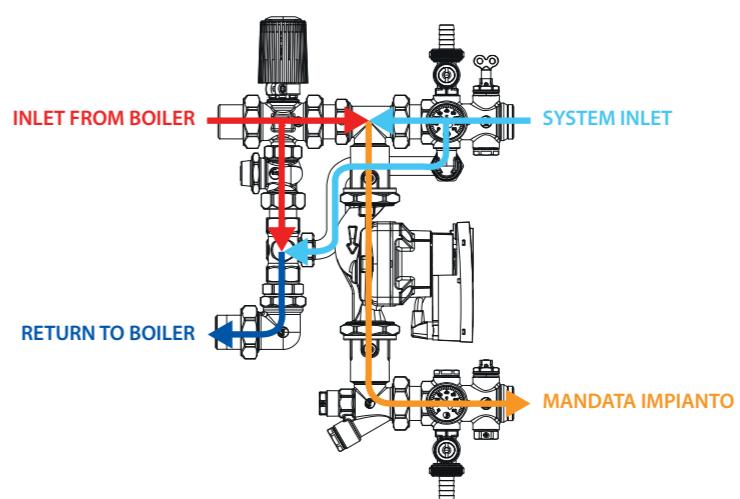

Electronically controlled high-efficiency pump 25/6 (230 V)

ErP
READY
2015
APPLIES TO
EUROPEAN
DIRECTIVE
FOR ENERGY
RELATED
PRODUCTS

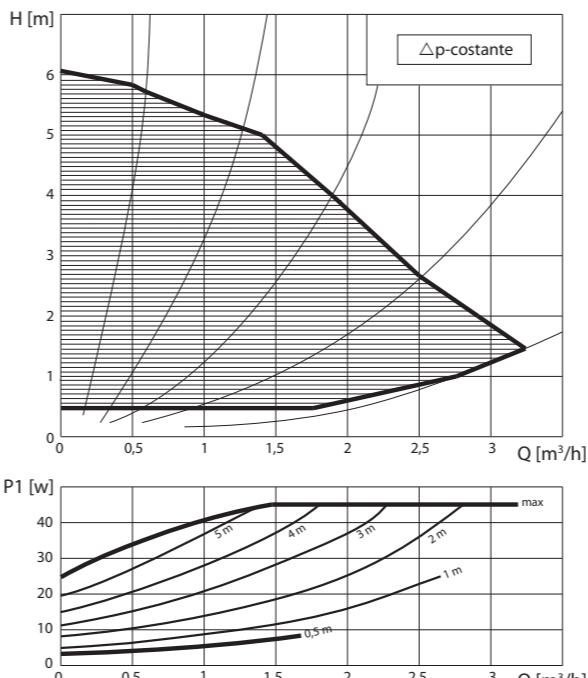

Pump operating



Automatic constant pressure difference (recommended).



Automatic variable pressure difference.



Automatic air vent routine (10 min duration): the pump runs alternatively with high and low speeds to help air bubbles to agglomerate and to go to air vent of the installation.

LED - errors

green continuous

Normal running.

green flashing

Automatic air vent routine.

green/red flashing

Abnormal situation (pump functional but stopped):
1) Undervoltage or overvoltage
2) Wrong temperature (fluid or room temperature)


red flashing

Pump stopped (permanent error: the pump need a manual reset). It can be necessary to change the pump.

NO LED

No power supply:
1) Pump is not connected to power supply: check cable connection.
2) LED is damaged: check if pump is running.
3) Electronics are damaged: change pump.

R557RY042- Componenti e regolazione

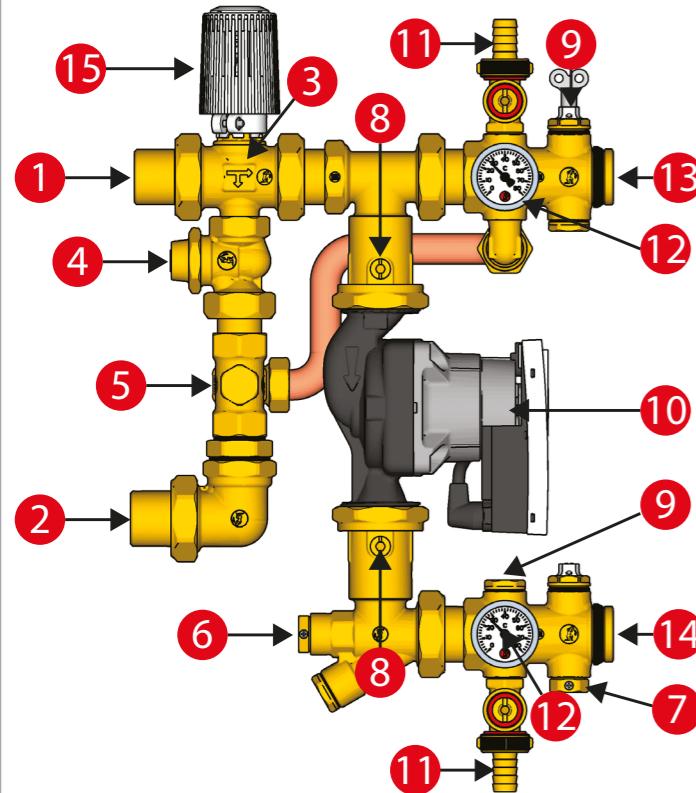

Regolazione

Valvola a 3 vie termostatica 3

Posizione testa	T.C.	1	2	3	4	5	T.A.
T [°C]	20	25	34	45	56	67	70

Detentore primario 4

APERTURA MEZZO GIRO
(taratura consigliata)


Detentore secondario 5

TUTTO APERTO
(taratura consigliata)

LEGENDA



1	Ingresso da caldaia	9	Sfoghi aria manuali
2	Ritorno alla caldaia	10	Circolatore
3	Valvola a 3 vie termostatica	11	Rubinetti di carico e scarico
4	Detentore primario	12	Alloggiamento termometri a immersione
5	Detentore secondario	13	Ritorno impianto
6	Alloggiamento sonda termostatica	14	Mandata impianto
7	Pozzetto termostato di sicurezza	15	Testa termostatica R462L
8	Valvole intercettazione circolatore		

R557RY042- Sensi di flusso

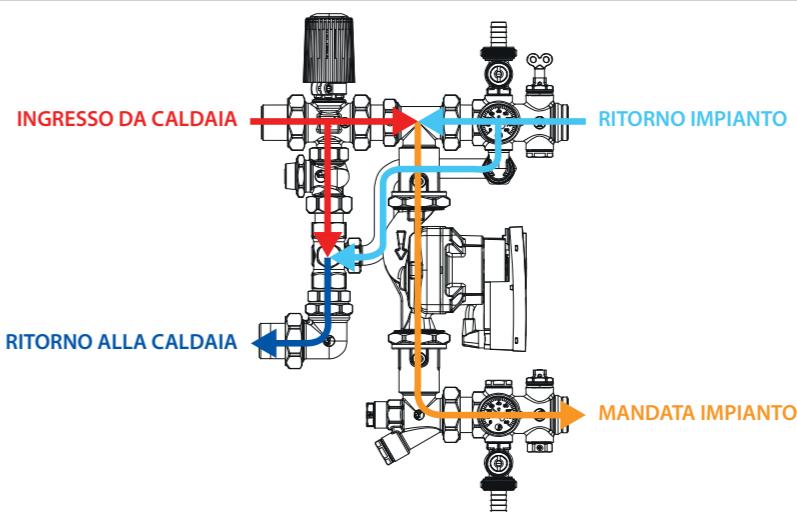

Circolatore automodulante 25/6 (230 V ac)

ErP
READY
2015
APPLIES TO
EUROPEAN
DIRECTIVE
FOR ENERGY
RELATED
PRODUCTS

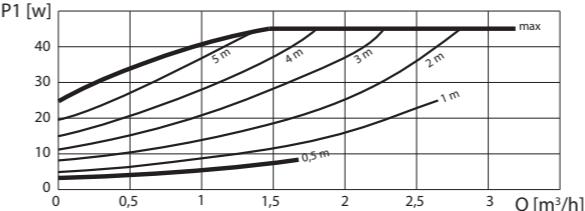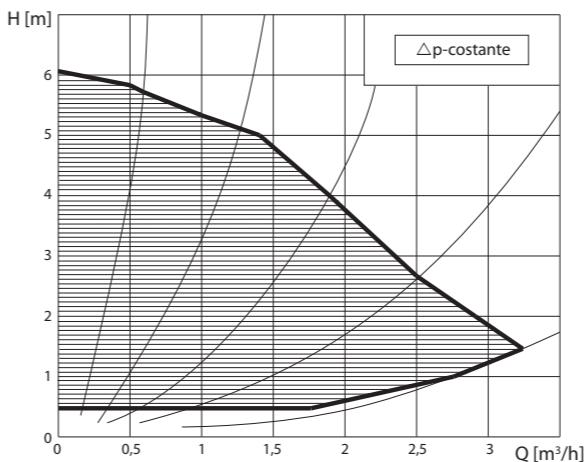

Modalità di funzionamento circolatore

	Funzionamento automatico a pressione costante (consigliato).
	Funzionamento automatico a pressione variabile.
	Funzionamento automatico per eliminazione aria (durata 10 minuti): il circolatore aumenta e diminuisce la velocità, per aggregare le bolle d'aria e favorirne l'eliminazione tramite la valvola di sfogo d'aria (non compresa con il circolatore).

LED - errori

	Funzionamento normale.
	Funzionamento automatico per eliminazione aria.
	Situazione anomala temporanea: 1) Voltaggio non corretto. 2) Temperatura del fluido o ambiente non corretta.
	Circolatore fermo (errore permanente: il circolatore richiede un reset manuale). Può essere necessaria la sostituzione del circolatore.
	Mancanza di alimentazione elettrica: 1) circolatore non alimentato: verificare connessione cavo. 2) LED danneggiato: verificare se il circolatore sta funzionando. 3) elettronica danneggiata: cambiare circolatore.